



**Anton Paar**

**SmartRef**

Quick Guide

# CONTENTS

---

**1    REQUIRED EQUIPMENT**

**2    INSTALLATION**

**3    ZERO ADJUSTMENT**

**4    MEASUREMENT**

**5    CLEANING**

**6    TIPS**

# 1 REQUIRED EQUIPMENT

---



SmartRef



Smartphone



Sample



Pipette

---

## 2 INSTALLATION

---

1



2



3



## 2 INSTALLATION

---

4



5



# 3 ZERO ADJUSTMENT

1



2



## 3 ZERO ADJUSTMENT

---

3



4



# 4 MEASUREMENT

---

1



2






# 4 MEASUREMENT

---

3

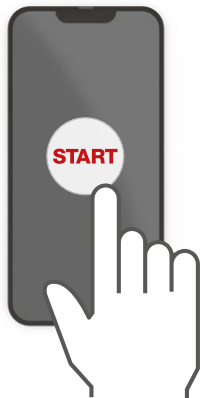

4



DOWNLOAD MANUAL




[www.my-smartref.com](http://www.my-smartref.com)

# 5 CLEANING

---

1

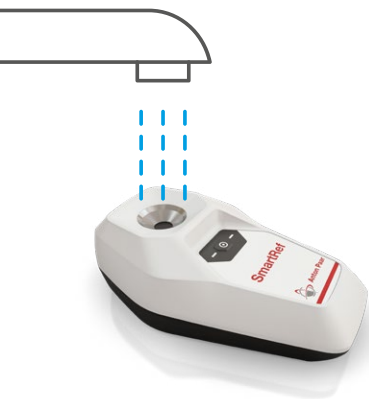

2



# 6 TIPS

---

1



2

Filter out  
solids



3



© 2022 Anton Paar ConsumerTec GmbH | All rights reserved.  
Specifications subject to change without notice.  
I02IB002EN-A

[www.my-smartref.com](http://www.my-smartref.com)